



Samsung TFT Color YP-T7J Motherboard Replacement

This guide will get you to all the components on the motherboard including the memory card along radio chip with other hardware.

Written By: Dylan Peters





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — The Back Cover



- Remove the 2 screws on the back cover using a Phillips head #0 screwdriver.

Step 2




- Remove the screw on each side of the device using a Phillips head screwdriver.

Step 3





- Using the plastic opening kit, place the prying end of the kit into the opening created by removing the screws.
- Gently pry open the back cover. Insert the plastic opening tool in between the cover joints.

Step 4 — The Battery

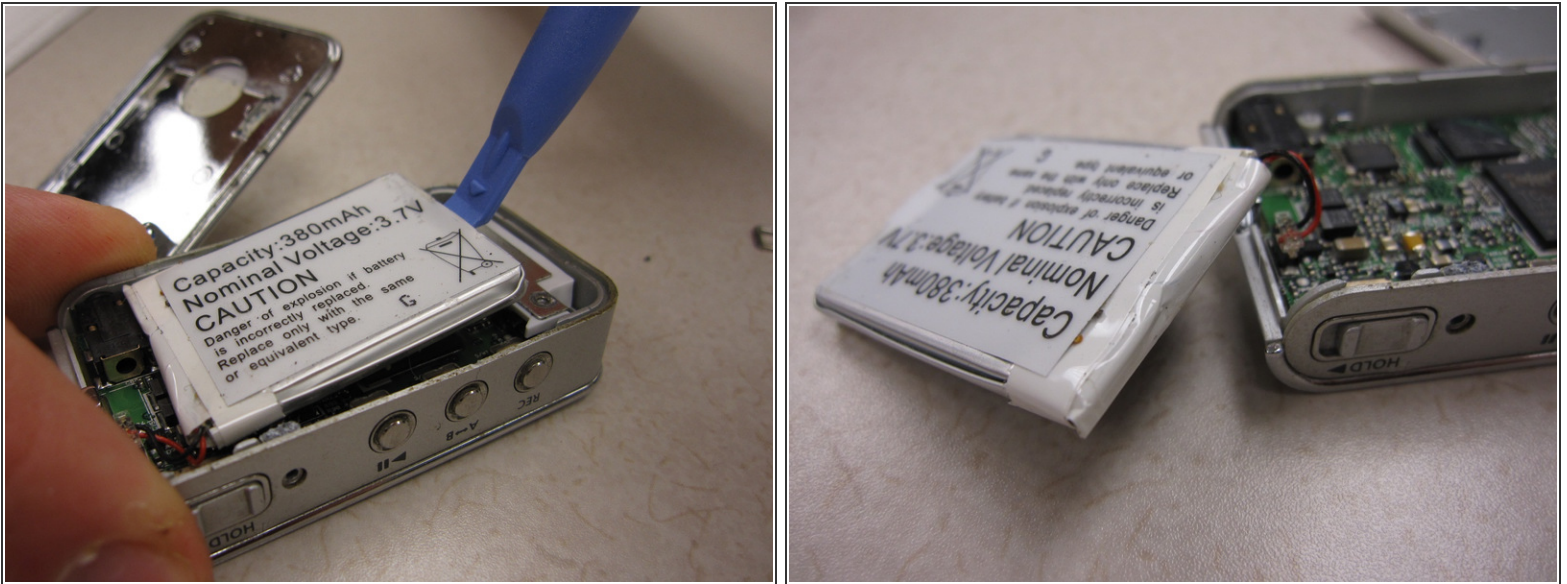

- Once the back cover has been removed the battery will be visible.
 - Pry the battery from the device.
- ⓘ NOTE: The battery should still be connected to the device




Step 5

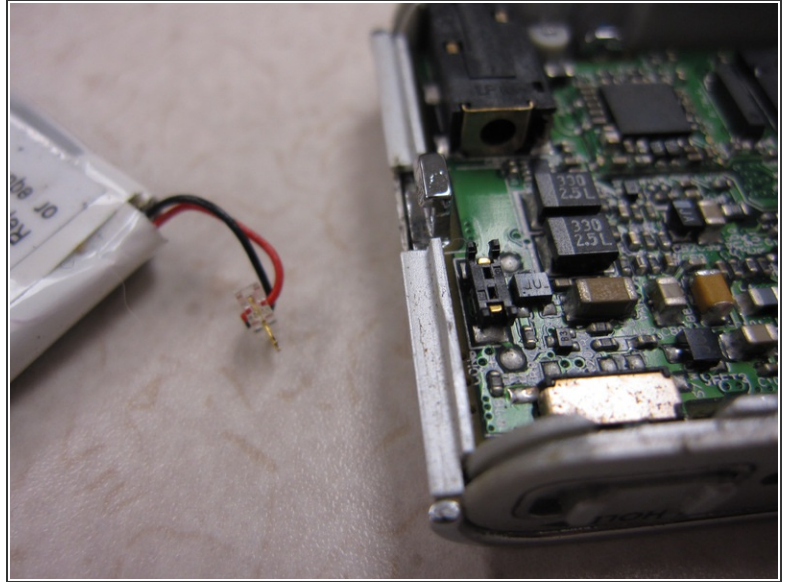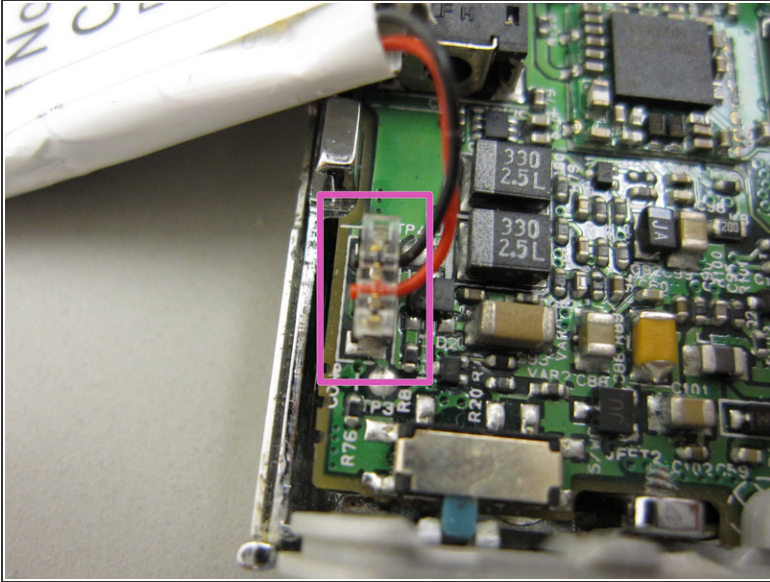

- Unplug the battery connecting cables.


ⓘ NOTE: The battery now should be free from all connections to the device.

Step 6 — USB Connector Dock

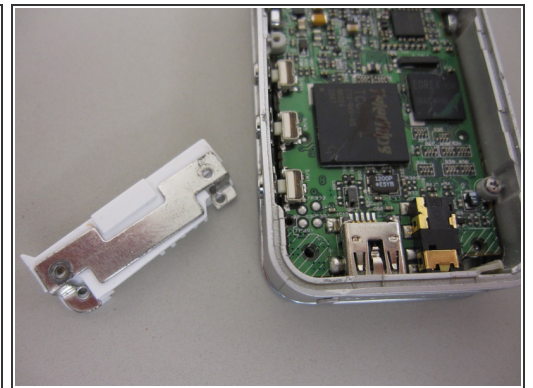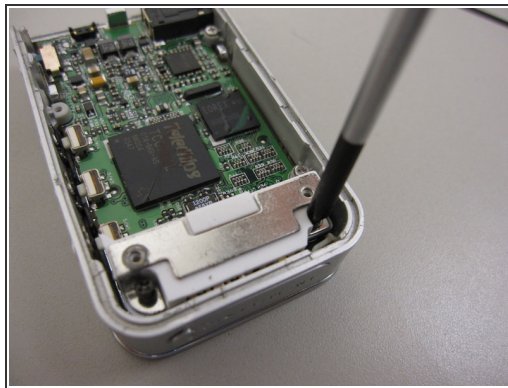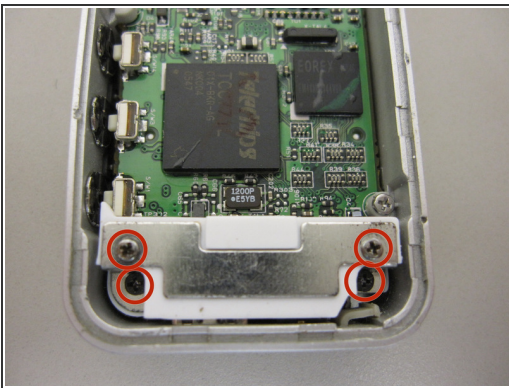

- Once the battery has been removed you can see the motherboard.
- Unscrew 4 screws on the metal docket using a Phillips head screw driver.
- The USB connector can now be taken off of the device.

Step 7 — The Front Cover

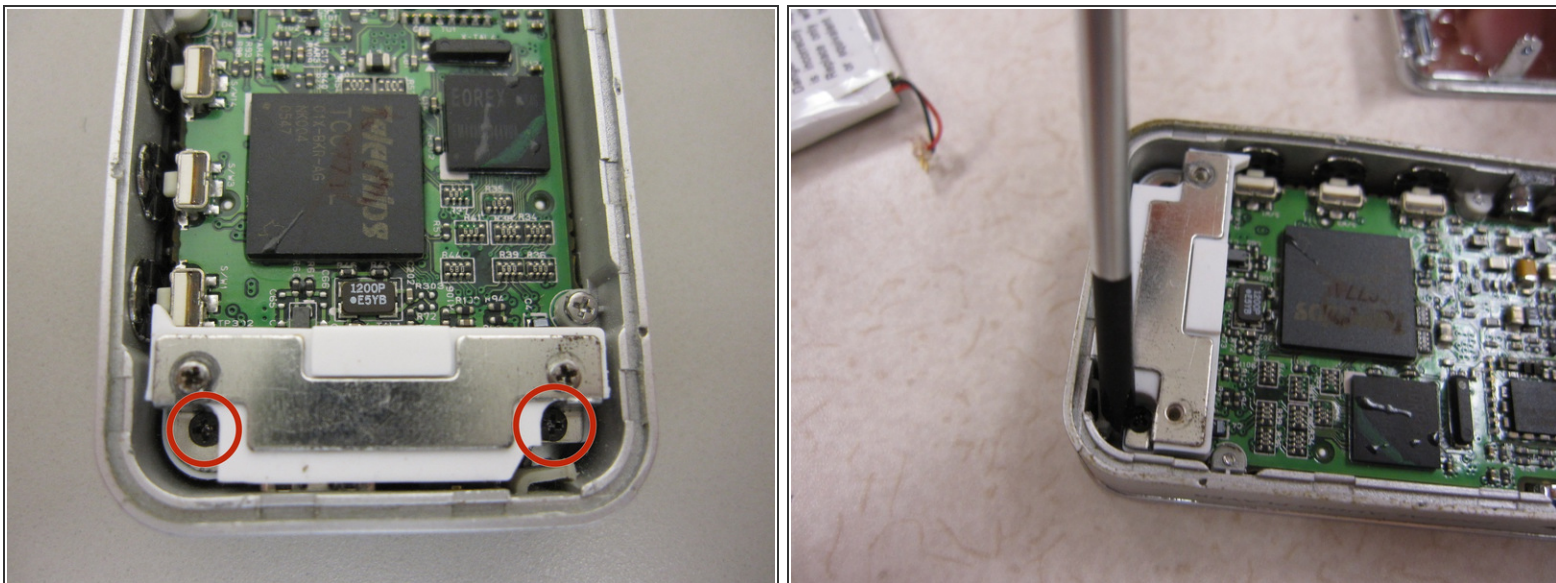


- Using the philips screwdriver, remove the two screws on the mother board.

Step 8




- Place the pry tool in-between the front cover and mother board.
- Gently separate the front cover.

Step 9

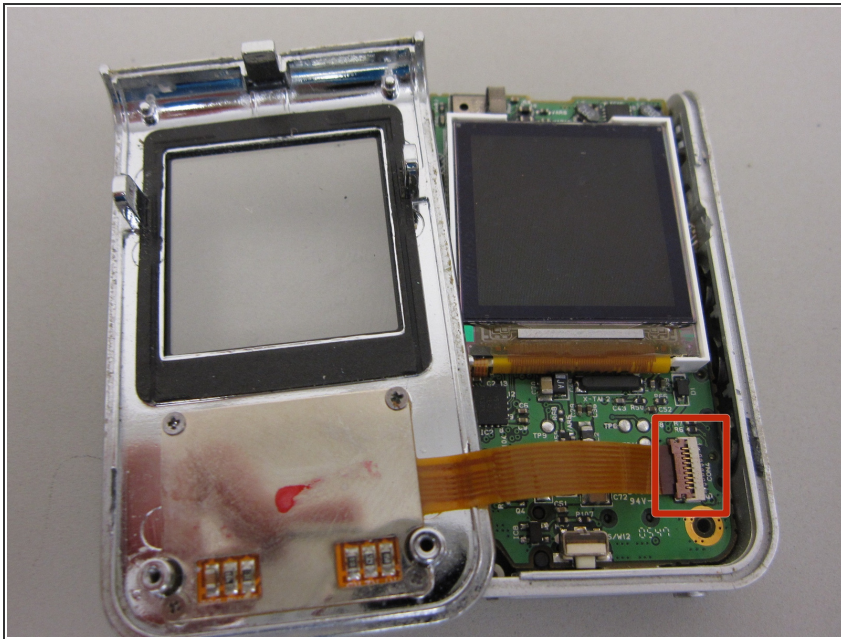

- After opening the front cover you will see and electric ribbon connecting the buttons to the mother board.


Step 10

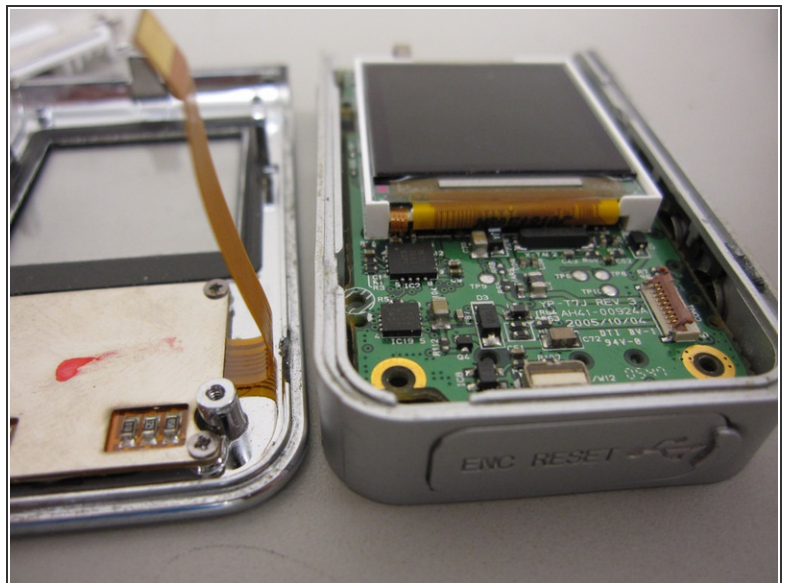

⚠ CAUTION: Do not rip the electric ribbon from the mother board.

- Carefully flip up the plastic lip that holds the electric ribbon to the board.



Step 11 — Motherboard

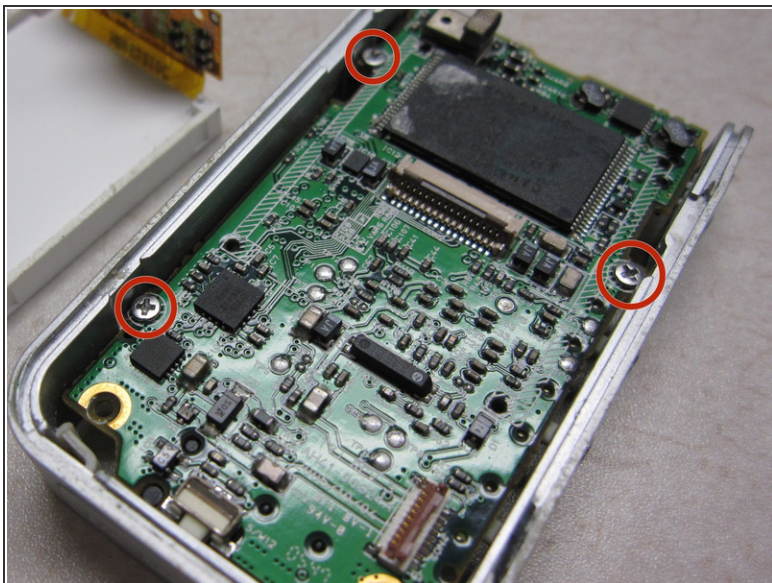

- Remove the 3 screws located around the motherboard. 2 screws are located on the left side and 1 screw is located on the right side.

i NOTE: The orientation of the second picture is screen side down!

Step 12

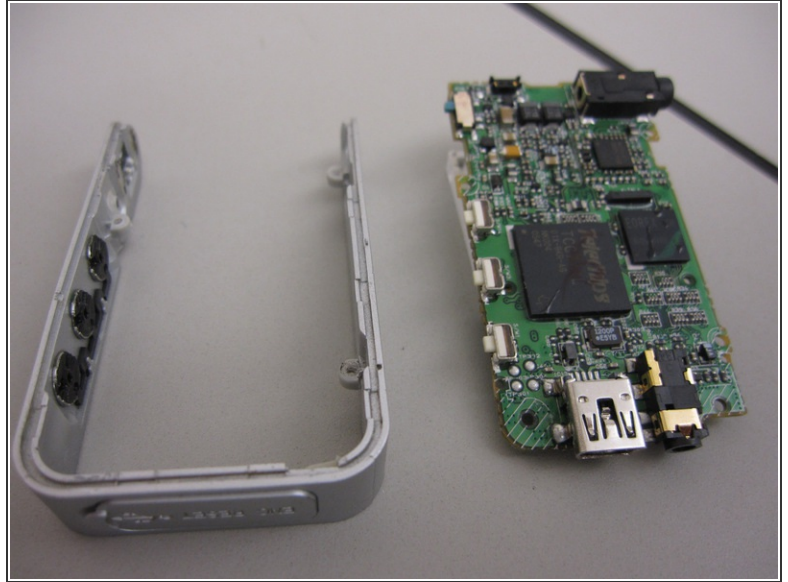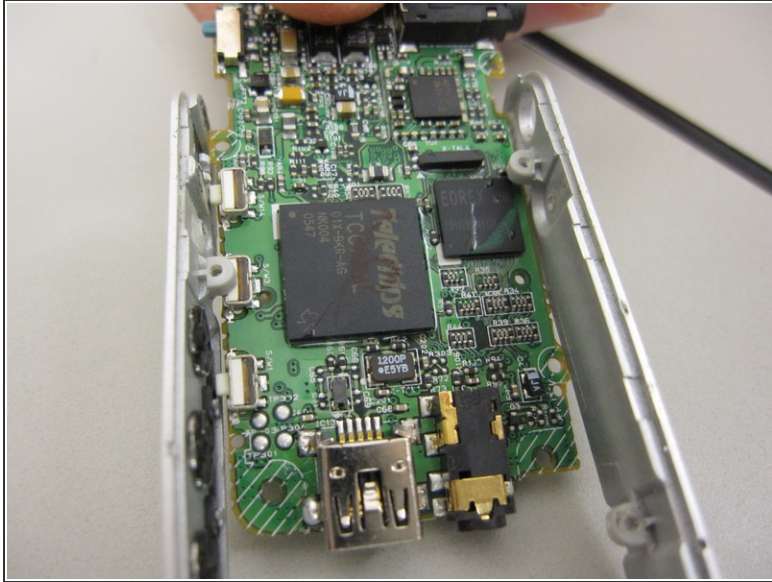

- The motherboard should be loose from the middle casing.
- Gently pull the motherboard away from the middle casing
- The device should now be in multiple parts.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 04:14:30 PM.